

POPCORN POPPER MANUAL

Caution:

- Use on an oversized gas burner may make side handles uncomfortably hot.
- Never leave empty popper on a hot burner.
- Never leave popper unattended while in use.
- Keep away from children and pets.
- Pot may remain hot after use.

Quick Start:



Wash and dry popper. Pour enough oil in to cover about half of the bottom. Pour enough popcorn in to cover the bottom with an even single layer of kernels. Place on burner set to "high". Stir. When rate of popping slows, remove from heat and pour popcorn into serving bowl.

Before Using the First Time:

Some surfaces may be protected by a plastic peel off coating. Remove coating before use. Wash and dry thoroughly. Your new popper is dishwasher safe!



Make Popcorn:

No measuring needed!

1. Place popper kettle on burner.
2. Pour enough oil in to cover about half of the bottom. As the oil warms in will spread to cover the entire bottom. You can use less oil to reduce calories, but popcorn may scorch. You can use more oil if desired. More oil reduces the chance of unpopped kernels, reduces the chance of scorching and improves the flavor.
3. Lift kettle from burner and tilt the popper to help oil flow and cover the bottom.
4. Place kettle back on burner and turn burner on high to warm the oil.
5. Within 30 seconds or so, pour enough kernels in to cover the bottom of the popper about one layer deep. The ratio between the diameter and height of the popper kettle were designed to eliminate the need to measure your popcorn! If you accidentally put in too much, popping corn may lift the lid and some popcorn could spill. So, if you're not sure how much to put in, put in a little less.

6. Put lid on kettle and turn crank a few times to help spread the oil and to bath the kernels in oil.
7. Turn burner to high. Popcorn will begin popping within a couple minutes. When the kernels start to pop, begin turning crank handle again. Continuous stirring is not necessary, but the more you stir the better your results!
8. The rate of popping will begin to slow as the popper fills. When the rate of popping is down to once every 10 seconds or so, remove kettle from heat.
9. If moisture is trapped under the lid, the popcorn will be tough. For best results, remove the lid immediately. NOTE: Our lid has oversized steam holes to help moisture escape and keep your popcorn crispy.
10. Pour into bowl. Use caution, as popcorn kettle and lid will be hot. Place empty kettle and lid on a heat-resistant surface (such as the stove top away from the hot burner) until cool.

Oops!

What Went Wrong?:

If you did everything just right, our popper will produce perfectly popped kernels every time! If you didn't get perfect results, try these fixes:

- If some kernels didn't pop, the most likely issue is the the kettle was removed from the heat too soon. It can also be caused by not using enough oil or stale popcorn.
- If some popcorn was scorched or burnt, the most likely cause is not using enough oil or leaving the kettle on the burner too long. Next time, use more oil. Remove kettle from burner when the rate of popcorn popping is down to once every 10 seconds or so. It's better to remove from heat too soon (and have a few kernels unpopped) than to scorch it.
- If popcorn is tough or chewy, the most likely cause it trapped moisture. Our oversized lid vents remove moisture more effectively than competing poppers. You can help by removing the lid sooner. It is safe to remove the lid even while the corn is still popping, if the popper is more than 3/4 full with popped corn. Caution: Lid may be hot.

A. Can't Decide? Try Them All

Eight 4-oz bags of unique varieties: red, extra large caramel, rainbow blend, blue, baby yellow and white; medium yellow and white; canola oil; and yellow salt. Boxed.

USA MADE

Amish Country Popcorn Sampler
#44-387



LIMITED WARRANTY:

Lehmans Hardware, Inc (Lehmans) warrants only to the original purchaser of this product ("Purchaser") that the product will be free from defects in material and workmanship under normal use and service for a period of one (1) year from the date of purchase. Lehmans sole obligation and liability under this limited warranty shall be, at its absolute option, to either repair or replace the defective product at no cost to the Purchaser (except as provided for herein), provided the product is found, to Lehmans satisfaction, to be in breach of this limited warranty. Lehmans reserves the right, before having any obligation under this limited warranty, to inspect the defective product, and all costs of shipping the product to Lehmans for inspection shall be borne solely by the Purchaser. This limited warranty is void if the product is not handled and used as prescribed in the instructions and manual accompanying the product. Additionally, the foregoing limited warranty does not include damage, repairs or replacements as a result of the following: normal wear and tear; product variations; misuse; abuse; negligence; accident; modifications; alterations; or services rendered by persons other than Lehmans. This limited warranty is non-transferable.

PROCEDURE:

In order to recover under this limited warranty, Purchaser must either notify Lehmans in writing or return the defective product to Lehmans within sixty (60) days of the product becoming defective, and Purchaser must provide Lehmans acceptable proof of original ownership (such as original sales receipt or other documentation Lehmans deems acceptable). Purchaser shall be responsible for all shipping and handling related costs and expenses related to the return and replacement of the product.

DISCLAIMER:

EXCEPT FOR THE LIMITED WARRANTY PROVIDED HEREIN, TO THE FULLEST EXTENT PERMITTED BY LAW, LEHMANS DISCLAIMS ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE OR OTHERWISE, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT THAT ANY IMPLIED WARRANTIES MAY NONETHELESS EXIST BY OPERATION OF LAW, ANY SUCH WARRANTIES ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

B. Delightful and Delicious: Popcorn from Amish Country

The same tasty popcorn we've offered for years, now packaged in a charming, keepsake burlap bag. Each has a silkscreened image of Amish Country. Two 2-lb bags.

USA MADE

Yellow Popcorn-Features Amish boy and girl.
#100-005-994

White Popcorn-Features Amish horse and buggy.
#100-005-993



LIMITATION OF LIABILITY:

REPAIR OR REPLACEMENT OF THE PRODUCT, AS PROVIDED HEREIN, PROVIDES PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY ALLEGED BREACH OF THIS LIMITED WARRANTY. IN NO EVENT SHALL LEHMANS NOR ITS PARENTS, AFFILIATES OR SUBSIDIARIES BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, INCLUDING, BUT NOT LIMITED TO, LOST REVENUES, LOST PROFITS, LOSS OF USE, LOSS OR RECOVERY OF DATA, RENTAL OR REPLACEMENT PRODUCTS, DOWNTIME, DAMAGE TO PROPERTY OR ANY THIRD-PARTY CLAIMS, ARISING OUT OF ANY THEORY OF RECOVERY, INCLUDING CLAIMS BASED ON WARRANTY, CONTRACT, TORT (INCLUDING NEGLIGENCE) OR STRICT LIABILITY. NOTWITHSTANDING THE TERM OF ANY LIMITED WARRANTY OR ANY WARRANTY IMPLIED BY LAW, OR IN THE EVENT THAT ANY LIMITED WARRANTY FAILS OF ITS ESSENTIAL PURPOSE, IN NO EVENT WILL LEHMANS OR ITS PARENTS, AFFILIATES OR SUBSIDIARIES ENTIRE LIABILITY TO PURCHASER EXCEED THE PURCHASE PRICE OF THE PRODUCT. SOME STATES/PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE AND PROVINCE TO PROVINCE.



Manufactured exclusively for Lehman's,
4779 Kidron Road,
Dalton, Ohio, 44618
800-438-5346
www.lehmans.com



C. Fantastic Pop-Ability

Our popcorn is picked and dried the old-fashioned way - on the cob in a corn crib. Natural drying process hardens kernels thoroughly before shelling and increases "pop-ability." Non-GMO.

USA MADE

Lehman's Ladyfinger-Pops with almost no hulls. Small in size and very delicious.
Small-Two 2-lb bags. #100-005-616
Large-6-lb bag. #121-0245

Lehman's Blue-Medium kernels are just a little sweeter than other varieties. Two 2-lb bags.
#100-005-881

Lehman's Purple-Tender with fewer hulls; high in antioxidants. Two 2-lb bags.
#100-005-880

Lehman's White-Light and delicious - best-seller.
Small-Two 2-lb bags. #100-005-617
Large-6-lb bag. #121-0250

Local Favorite-Traditional large yellow kernels. Pops big and crunchy. Sold locally since 1936.
Small-Two 1½-lb bags. #100-005-618
Large-6-lb bag. #PC06