
Instructions for Attaching Two-Man Saw Handle #16

Thank you for ordering the two-man saw handle. Attaching the two-man saw handle can be a little tricky. We hope these instructions and picture help the job go smoothly. If you have any questions about attaching the saw handle, please call.

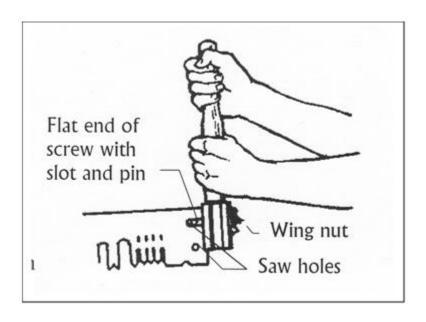

Step 1. Loosen wing nut that is on the screw.

- **Step 2.** Pull smooth, round-head pin out of screw as far as you can. (No part of pin should be in slot at flat end of screw.)
- **Step 3.** Slide blade end into slot at flat end of screw. The saw teeth should point away from handle (see picture). (If the blade won't fit into slot, it may be necessary to widen slot with a flat head screwdriver.)
- **Step 4.** Line one of the saw blade holes (it doesn't matter which one) with the hole in the screw.
- Step 5. Push pin through holes in the blade and the screw.
- Step 6. Tighten wing nut. (Make sure blade end is in the groove on the bracket.)

When you are done, the saw should look like the picture above. The saw is now ready to use.

V:\Literature\Two Man Saw Instructions.Docx